

Assembly of Glass Blocks

For bonding of glass blocks, **Turbo Tack 291*** is recommended.

- Before bonding it is important to make sure that all surfaces are clean, dry and free of grease
- Turbo Tack 291 is applied in two strings along the edges of the assembly profiles, see fig. 1. The adhesive is used for both the vertical and the horizontal profiles and on both sides.

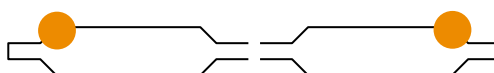


fig 1. cross section of the assembly profile.

- It is important that the adhesive has full contact with the glass blocks both in vertical and horizontal position.
- One cartridge is enough for approx. 2,5 meters by applying adhesives on both sides of the assembly profile.
- Along floor and wall edges it is recommended to use Sanitary- & Building Silicone 577 or Sanitary Silicone 512.

* Remember, there can be a difference on glass blocks and assembly profiles. It is therefore always recommended to follow the instructions from the glass block supplier. Please also refer to the Product Information sheet for Turbo Tack 291.

The information and data contained is based on extensive laboratory testing and our practical experiences and are meant for helping the user to find best possible working methods. As the working conditions at the user are beyond our control, we make no warranties concerning the results, achieved by the products. The information in this "How To Do" information sheet are typical values, intended as a guideline, they should not be regarded as product specifications. Please also refer to our general sales conditions and terms of delivery.